
LOX5

HÄFELE


Press-to-Pair 4-way distributor

For Pairing with Wireless Battery Free Rocker Switch
850.00.025

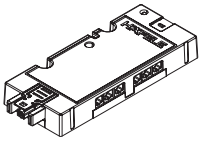


12 V	850.00.810
24 V	850.00.811


	12/24 V System	W	F	mm	T_A
12V	850.00.810	0 - 60 W		120 x 50 x 16	-25 °C - 45 °C -13 °F - 113 °F
24V	850.00.811	0 - 120 W / UL: 90 W			

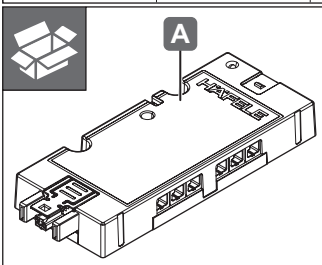


850.00.025
Wireless Battery Free Rocker Switch



OPTIONAL




mm	12V
500	833.95.712
1000	833.95.713
2000	833.95.714





mm	24V
500	833.95.719
1000	833.95.718
2000	833.95.717


100 - 240 V~

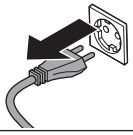

1

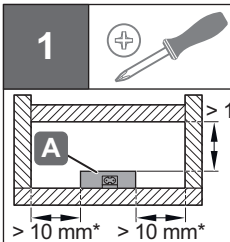


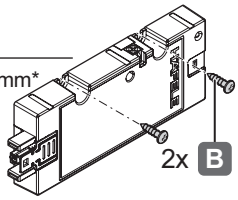


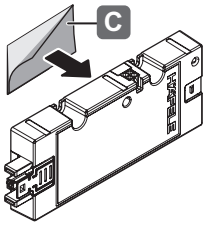

* acc. to AS/NZS standards.


2

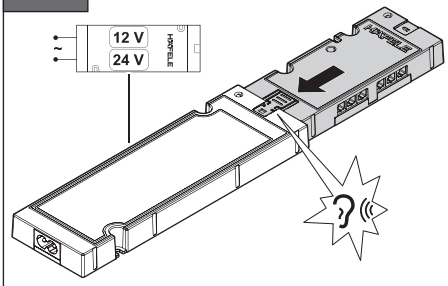

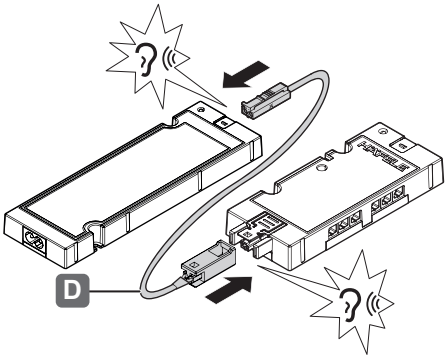


IP20

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Häfele SE & Co KG is under license. Other trademarks and trade names are those of their respective owners.

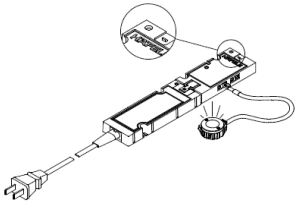

Before you start

Connect the Press-to-Pair Distributor to a Driver and power the lighting system. The red light on the Distributor will turn on and remain solid.

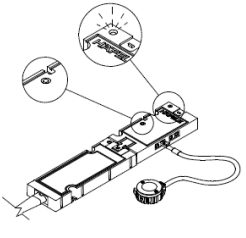


Set Distributor to Pairing Mode


To initiate pairing, press and release the black reset button on the Distributor. The red light on the Distributor will blink slowly when ready for pairing.

Pairing the Distributor with a Rocker Switch

1. Choose Rocker Switch to use throughout the pairing process.
2. Press and hold the **upper** button for **more than 8 seconds** and release.
3. Press the **upper** button for **less than 2 seconds** and release.
4. Press and hold the **upper** button for **more than 8 seconds** and release.

The Status LED and the lights connected to the Distributor should flash 3 times to indicate the pairing was successful.

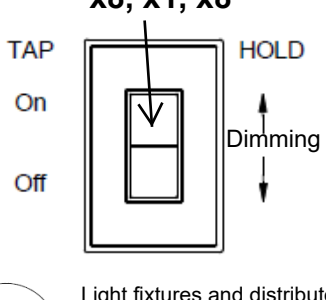




Light fixtures and distributor status light will flash 3 X indicating switch is paired

Control settings are pre-programmed and available once pairing is complete.

Adding Switches and/or Distributors


- A single rocker switch can be paired with multiple Press-to-Pair distributors.
- Similarly, a single Distributor can be paired with multiple Rocker switches.
- To pair additional Rocker Switches or Distributors, repeat the steps above with the additional components.

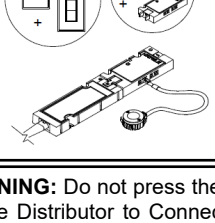

Unpairing a Distributor and Switch

Press and hold the Reset Button on the Distributor for 8 seconds.

The Status LED will blink quickly (twice a second) to indicate that switches have been Unpaired. The light will return to solid when released.

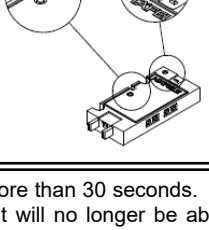

**** WARNING:** Do not press the Reset button for more than 30 seconds. This will reset the Distributor to Connect Mesh Mode and it will no longer be able direct pair with a Rocker Switch.

FCC Changes or modifications not expressly approved by the manufacturer could void the user's au-thority to operate the equipment". "This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Subject to alterations

© 2023 by Häfele America Co.
www.hafele.com

04-15-2023